

CC7V-T1A Product Documentation

Product Documentation

CC7V-T1A

Quartz Crystal Unit 32.768 kHz

March 2021 1/12 Rev. 1.1

2. Product Description

The CC7V-T1A is a low frequency SMT Quartz Crystal Unit that incorporates a tuning fork Quartz Crystal Resonator. The Quartz Crystal Resonator operates under vacuum condition in a hermetically sealed ceramic package with ceramic lid.

Suitable oscillator-circuitries can operate the CC7V-T1A Quartz Crystal Units in fundamental mode consuming very low power. For technical assistance for optimizing oscillator-circuitries please contact Micro Crystal under sales@microcrystal.com

2.1. Application Examples

IoT
Metering
Industrial
Automotive
Health Care
Wearables, Portables

2.2. Ordering Information


Example: CC7V-T1A 32.768 kHz CL: 12.5 pF -20/+20ppm TA QC

Code	Operating temperature range
TA (Standard)	-40 to +85°C
ТВ	-40 to +125°C
TC	-55 to +125°C


Code	Qualification
QC (Standard)	Commercial Grade
QA	Automotive Grade AEC-Q200
QM	Medical Grade

3. Electrical Characteristics

3.1. Equivalent Electrical Model

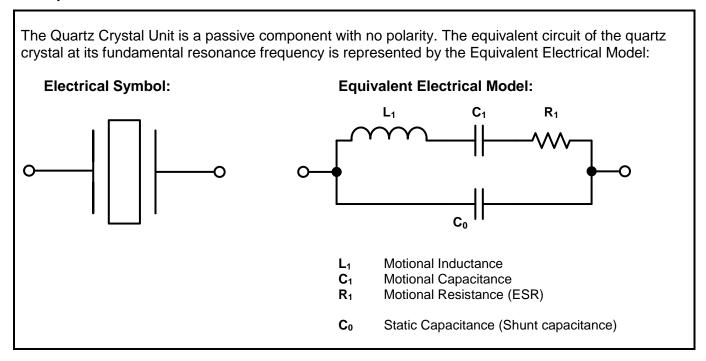


3.2. Frequency vs Temperature Characteristics

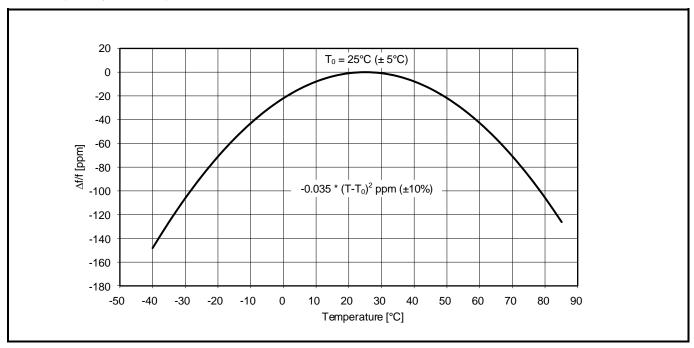


4. Mechanical Properties


4.1. Package Dimension

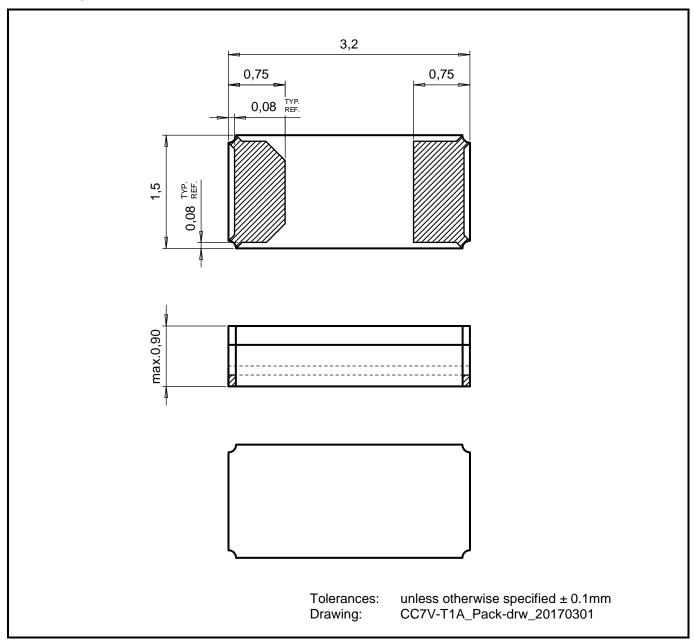

4.2. Recommended Solderpad Layout

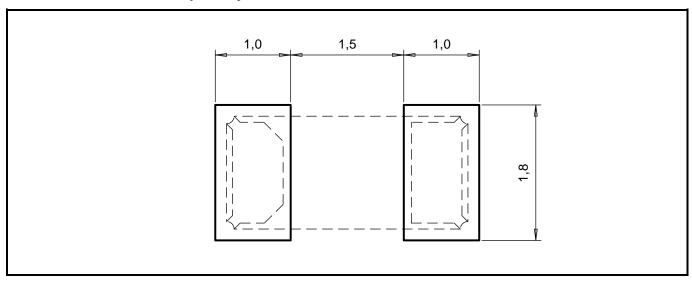


4.3. Product Marking

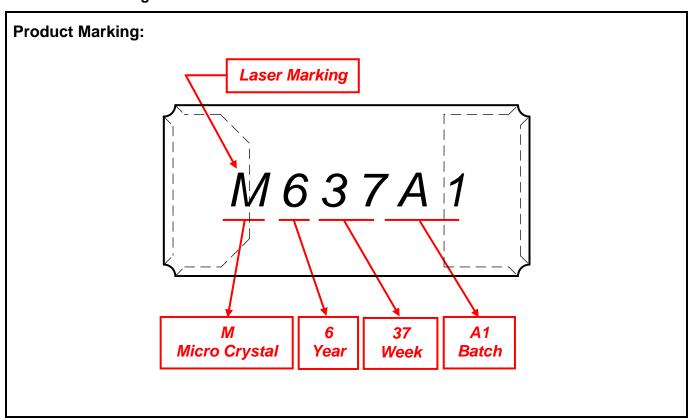

5. Material Composition Declaration & Environmental Information

5.1. Homogenous Material Composition Declaration

Homogenous material information according to IPC-1752 standard

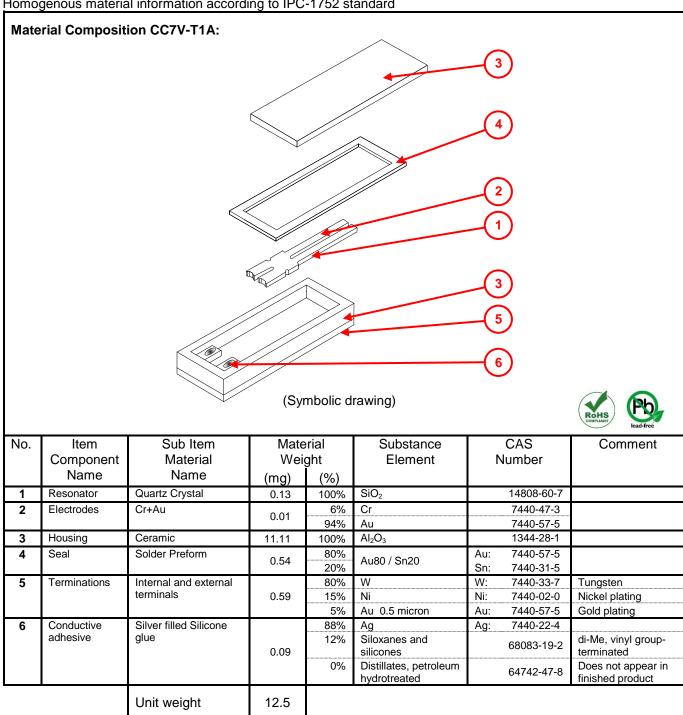

5.2. Material Analysis & Test Results

Homogenous material information according to IPC-1752 standard

No.	o. Item Sub Item Component Material		RoHS				Halogen				Phthalates					
	Name	Name	Ч	РЭ	Hg	Cr+6	PBB	BDE	Ь	IJ	Br	1	488	d80	DEHP	ANIQ
1	Resonator	Quartz Crystal	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
2	Electrodes	Cr+Au	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
3	Housing	Ceramic	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
4	Seal	Solder Preform	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
5	Terminations	Int. & ext. terminals	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
6	Conductive adhesive	Silver filled Silicone glue	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd	nd
	MDL	Measurement Detection Limit	2 ppm		5 ppm		50 ppm			0.003%		0.01%				

= not detectable

Test methods:

RoHS Test method with reference to IEC 62321-5: 2013 MDL: 2 ppm (PBB / PBDE: 5 ppm)

Test method with reference to BS EN 14582:2007 Halogen MDL: 50 ppm

Phthalates Test method with reference to EN 14372 MDL: 0.003 % (DINP 0.01%)

5.3. Recycling Material Information

Recycling material information according to IPC-1752 standard.

Flement weight is accumulated and referenced to the unit weight of 12.5 mg.


=lement weigh	nt is acc	cumulated and refer	enced to t	ne unit v	veight of 12.5 mg.			
Item	No.	Item	Material		Substance		CAS	Comment
Material		Component	Weight		Element	1	Number	
Name		Name	(mg)	(%)				
Quartz Crystal	1	Resonator	0.13	1.04	SiO ₂		14808-60-7	
Chromium	2	Electrodes	0.0006	0.005	Cr		7440-47-3	
Ceramic	3	Housing	11.11	89.09	Al_2O_3		1344-28-1	
Gold	2 4 5	Electrodes Seal Terminations	0.47	3.78	Au		7440-57-5	
Tin	4	Seal	0.11	0.87	Sn	Sn:	7440-31-5	
Nickel	5	Terminations	0.09	0.71	Ni	Ni:	7440-02-0	
Tungsten	5	Terminations	0.47	3.79	W	W:	7440-33-7	
Silver	6a	Conductive adhesive	0.08	0.64	Ag	Ag:	7440-22-4	
Siloxanes and silicones	6b	Conductive adhesive	0.011	0.087	Siloxanes and silicones		68083-19-2	di-Me, vinyl group- terminated
Distillates	6c	Conductive adhesive	0	0	Distillates		64742-47-8	hydrotreated petroleum, does not appear in finished products
	Unit v	weight (total)	12.5	100				

5.4. Environmental Properties & Absolute Maximum Ratings

Package	Description
DFN-2 ceramic package	Dual Flat No Leads (DFN), hermetically sealed ceramic package with ceramic lid.


Parameter	Directive	Conditions	Value
Product weight (total)			12.5 mg
Storage temperature		Store as bare product	-55 to +125°C
Moisture sensitivity level (MSL)	IPC/JEDEC J-STD-020D		MSL 1
FIT / MTBF			available on request

Terminal finish:

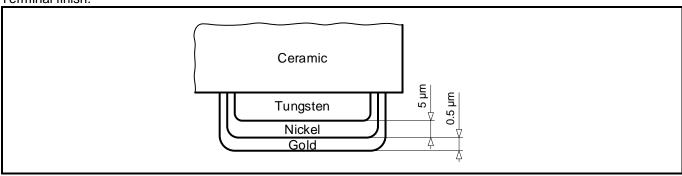

6. Application Information

6.1. Soldering Information

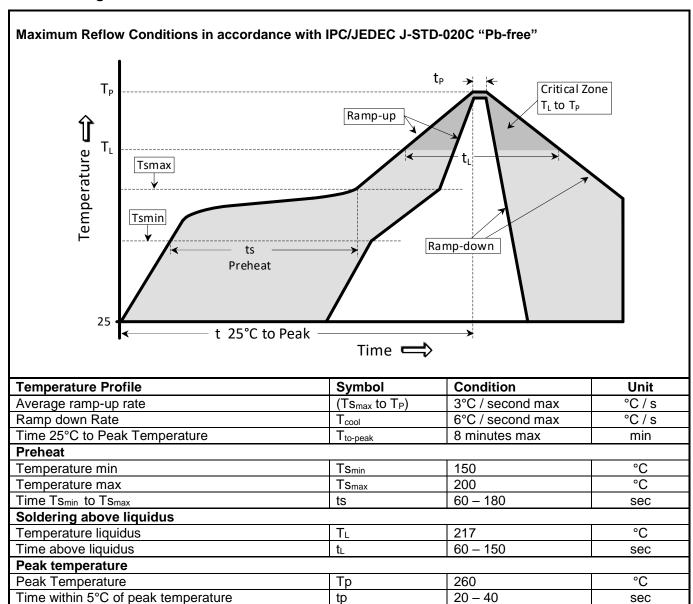

6.2. Handling Instructions for Quartz Crystal Units

The built-in tuning-fork crystal consists of pure Silicon Dioxide in crystalline form. The cavity inside the package is evacuated and hermetically sealed in order for the crystal blank to function undisturbed from air molecules, humidity and other influences.

Shock and vibration:

Keep the crystal / module from being exposed to **excessive mechanical shock and vibration**. Micro Crystal guarantees that the crystal / module will bear a mechanical shock of 5000 g / 0.3 ms.

The following special situations may generate either shock or vibration:

Multiple PCB panels - Usually at the end of the pick & place process the single PCBs are cut out with a router. These machines sometimes generate vibrations on the PCB that have a fundamental or harmonic frequency close to 32.768 kHz. This might cause breakage of crystal blanks due to resonance. Router speed should be adjusted to avoid resonant vibration.

Ultrasonic cleaning - Avoid cleaning processes using ultrasonic energy. These processes can damage the crystals due to the mechanical resonance frequencies of the crystal blank.


Overheating, rework high temperature exposure:


Avoid overheating the package. The package is sealed with a seal ring consisting of 80% Gold and 20% Tin. The eutectic melting temperature of this alloy is at 280°C. Heating the seal ring up to >280°C will cause melting of the metal seal which then, due to the vacuum, is sucked into the cavity forming an air duct. This happens when using hot-air-gun set at temperatures >300°C.

Use the following methods for rework:

- Use a hot-air- gun set at 270°C.
- Use 2 temperature controlled soldering irons, set at 270°C, with special-tips to contact all solder-joints from both sides of the package at the same time, remove part with tweezers when pad solder is liquid.

7. Packing & Shipping Information

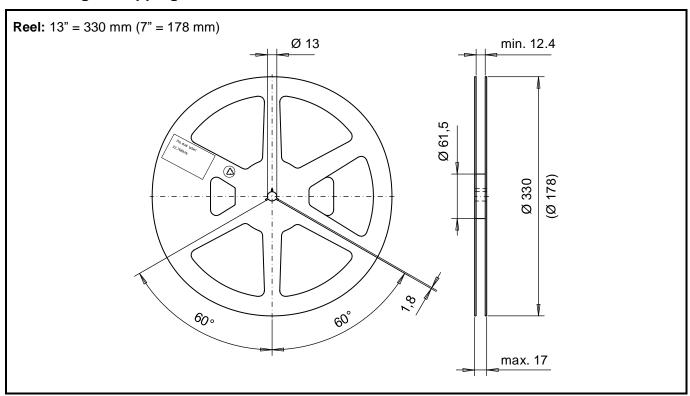

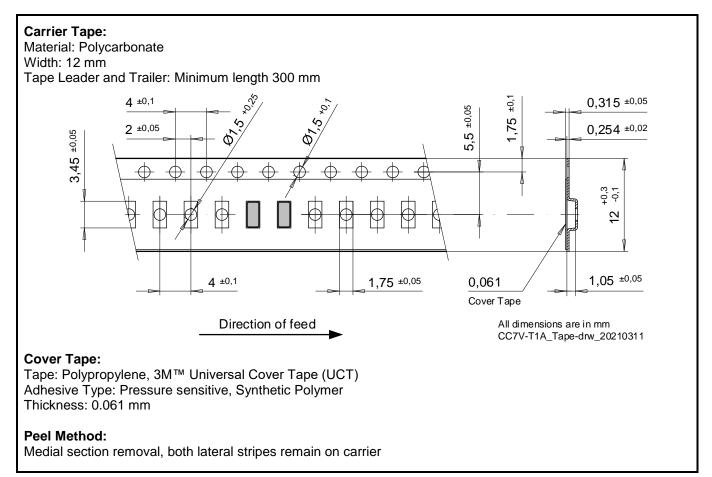

8. Compliance Information

Micro Crystal confirms that the standard product Quartz Crystal Unit CC7V-T1A is compliant with "EU RoHS Directive" and "EU REACh Directives".

Please find the actual Certificate of Conformance for Environmental Regulations on our website: CoC Environment CC&CM-Series.pdf

9. Document Revision History

Date	Revision #	Revision Details	
March 2017	1.0	First release	
March 2021	1.1	Adapted Application Examples, 2.1. Added package designation DFN-2, 5.4. Corrected Carrier Tape drawing, 7. Added new disclaimer	

The information contained in this document is believed to be accurate and reliable. However, Micro Crystal assumes no responsibility for any consequences resulting from the use of such information nor for any infringement of patents or other rights of third parties, which may result from its use. In accordance with our policy of continuous development and improvement, Micro Crystal reserves the right to modify specifications mentioned in this publication without prior notice and as deemed necessary.

Any use of Products for the manufacture of arms is prohibited. Customer shall impose that same obligation upon all third-party purchasers.

Without the express written approval of Micro Crystal, Products are not authorized for use as components in safety and life supporting systems as well as in any implantable medical devices. The unauthorized use of Products in such systems / applications / equipment is solely at the risk of the customer and such customer agrees to defend and hold Micro Crystal harmless from and against any and all claims, suits, damages, cost, and expenses resulting from any unauthorized use of Products.

No licenses to patents or other intellectual property rights of Micro Crystal are granted in connection with the sale of Micro Crystal products, neither expressly nor implicitly. In respect of the intended use of Micro Crystal products by customer, customer is solely responsible for observing existing patents and other intellectual property rights of third parties and for obtaining, as the case may be, the necessary licenses.



Micro Crystal AG Muehlestrasse 14 CH-2540 Grenchen Switzerland Phone +41 32 655 82 82 sales@microcrystal.com www.microcrystal.com